


# Short Throw Projector Mount *STM-B* Installation Manual


## Step 1. Adjusting the Mount

If the mount is not in the direction as shown in the right picture below, please turn over the extension arm and locate the three middle screws attaching the mounting bracket to the extension arm (pictured below). Unscrew the two side screws completely and only loosen the middle screw until you can turn the bracket 180°, then screw back the three screws into the bracket.

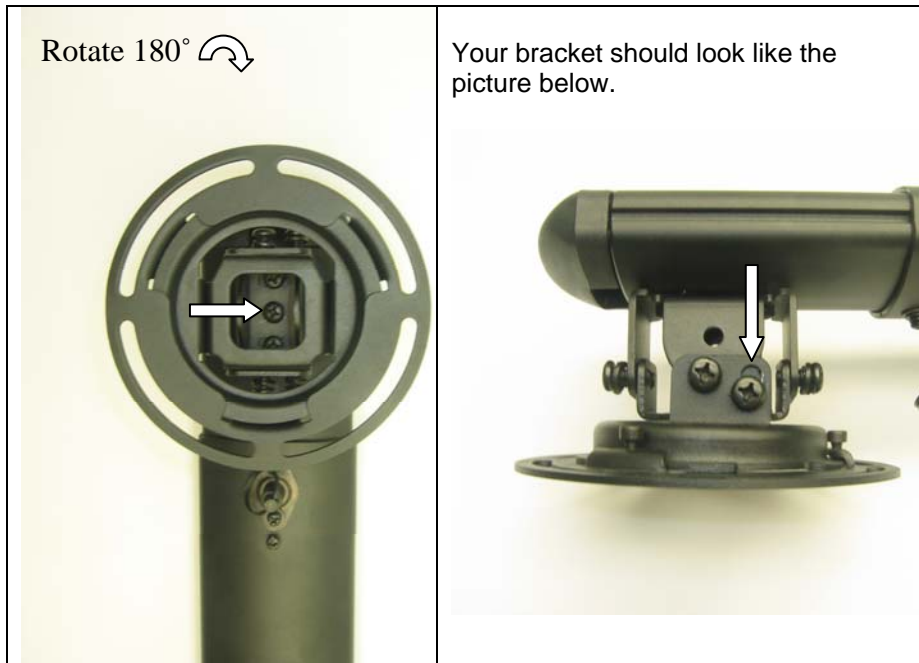


## Step 2. Mounting to the Projector

Locate the mounting holes on the bottom of your projector. You may have three or four, depending on your projector model.

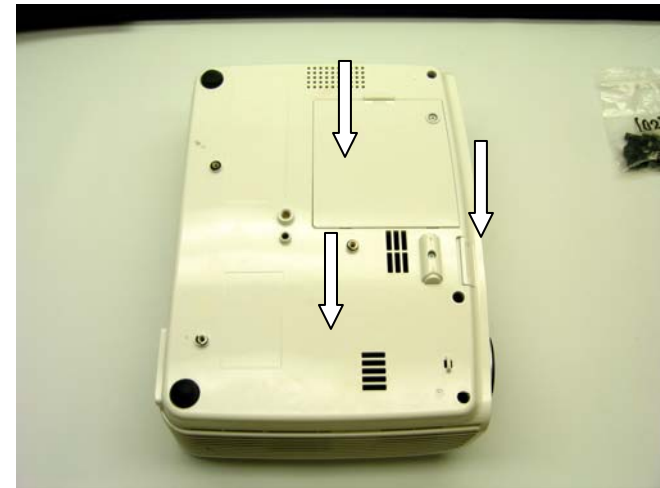


Using **number 00 mounting brackets** place them on to the projector. Make sure that the **number 4 washer** is under the bracket and screw in using the **number 16 screws**.

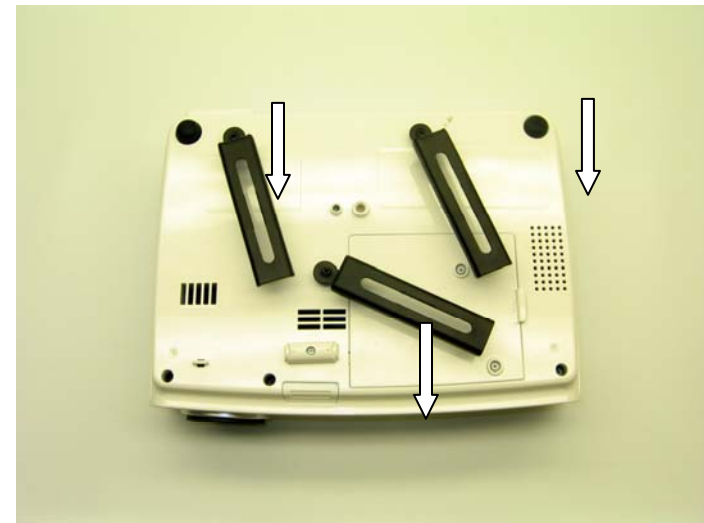

Take the LFM-style projector mount and place it on top of the mounting brackets. You may need to adjust your mounting brackets so they fit on the LFM-style projector mount.




Place the **number 5 square nut** under the mounting brackets and screw in using the **number 2 long hex screws**.

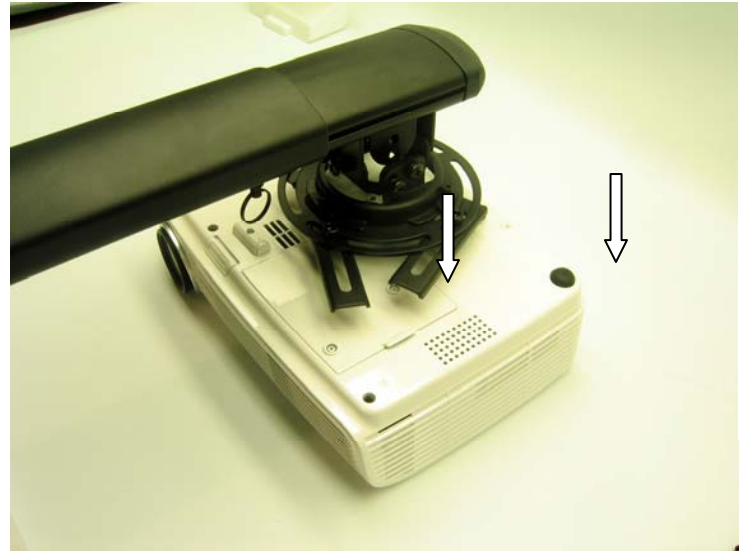

### Step 3. Mounting the Short Throw Projector Mount to the wall

Attach the extension arm with the LFM-style projector mount to the wall plate using the **number 8 screws** and **number 9 lock nuts**.

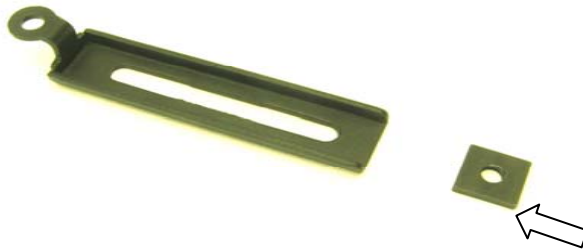

Attach the wall plate to the wall by using the **number 3 washers** and the **number 1 woodscrews**.



## Finished Installation



## Included Hardware List

Part #	Item
00	Mounting Brackets x4, Extension Brackets x4
01	Wood Screw
02	Long Hex Screw (M6 x 12mm)
03	Medium Flat Washer
04	Small Flat Washers
05	Square Nut
06	M4 Allen Wrench
07	M6 Allen Wrench
08	Phillips Screw (M6 x 8mm)
09	Lock Nuts
---	---
11	M6 (6mm) Philips Screw
12	M5 (5mm) Philips Screw
13	M4 (4mm) Long Philips Screw
14	M4 (4mm) Short Philips Screw
15	M3 (3mm) Long Philips Screw
16	M3 (3mm) Short Philips Screw
17	M2 .5/2.6 (2.5mm) Philips Screw

