


Installation Instructions

PFM-Series Flush TV Wall Mount

www.RiteMounts.com

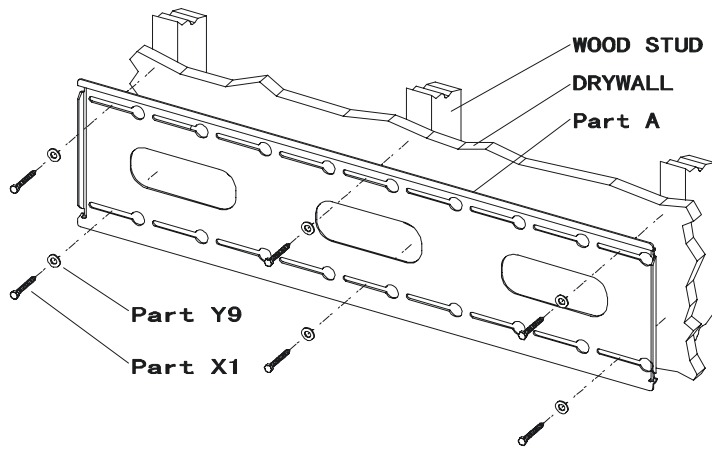

b) Mounting to solid wall

Use solid wall anchor* along with the wood screws (Part-X1). First drill a hole for solid wall anchor, put it in, attach the Part-A (wall plate), and screw Part-X1(wood screw) into the solid wall anchor.


*solid wall anchor is sold separately, or available in local hardware stores.

Warning: Make sure the wall can support the combined weight of mount and the TV.

Step3: Hang the TV with the interface arm installed (Part-B) onto the wall plate (Part-A)

Hook the TV with arms (Part-B) installed onto the top of the wall pate (Part-A), then slowly swing screen inward. Then please slide in the anti-theft bar (Part-C).

Optional: A padlock can be used to lock Part-A and Part-C together, if anti-theft is necessary

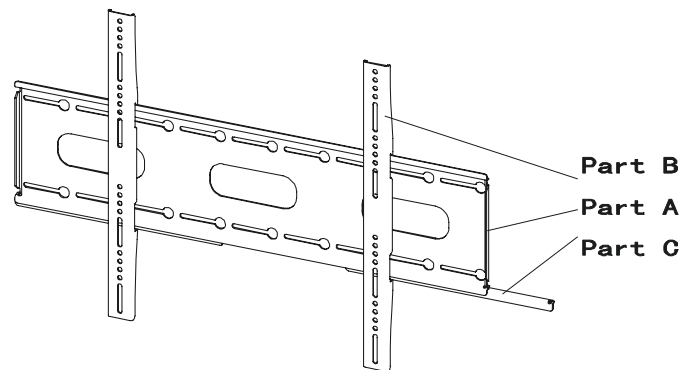

DISCLAIMER

This document is intended to be made accurate and complete. However, there is no guarantee the information contained herein covers every aspects. The manufacturer and the distributor make no representation of any warranty regarding the information contained, and assume no corresponding responsibility.

WARNING:

- Prior to installation, please read and understand this instruction manual. If you have any questions or uncertainties, please consult your seller or local professionals.
- If the wall structure could not support the combined weight of mount and the TV, please reinforce the wall prior to the installation. Installation on drywall may be dangerous.
- For installation on wood stud, please make sure the wood screws are in the center of the wood stud, using an “edge to edge” stud finder is recommended.
- To avoid damage a flat panel television set should never be laid flat. It must remain in an upright position.
- Tighten the screws firmly, but never overtighten.


Features:

- **Designed for 37” to 63” flat screen TVs.**
- Ultra slim design holds the screen only 15/16” from the wall.
- A padlock can be added for security.
- Holds TV up to 170 LBs.


Required tools:

Stud finder; Screwdriver; Level; Drill

Parts list:

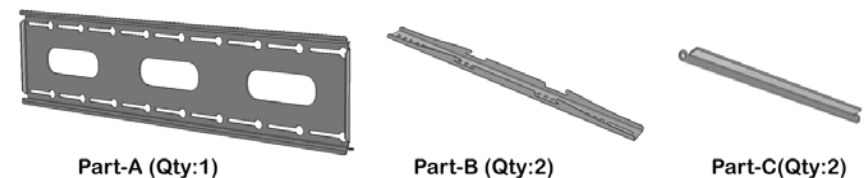


Screw list:

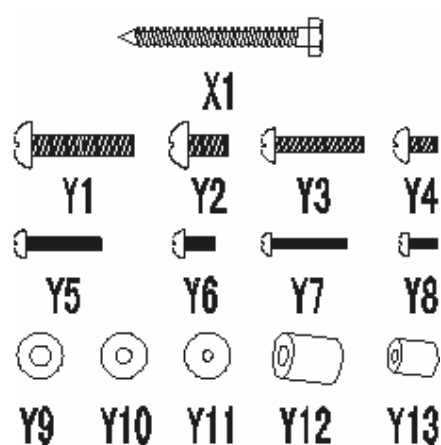


Description	Qty
X1 Wood Screw	6
Y1 M8 x 40 Screw	4 or 0
Y2 M8 x 16 Screw	4 or 0
Y3 M6 x 35 Screw	4 or 0
Y4 M6 x 12 Screw	4 or 0
Y5 M5 x 30 Screw	4 or 0
Y6 M5 x 12 Screw	4 or 0
Y7 M4 x 30 Screw	4 or 0
Y8 M4 x 12 Screw	4 or 0
Y9 Washer for Wood Screws (Qty:6) and for M8 screws (Qty:4)	10 or 6
Y10 Washer for M6 Screw	4 or 0
Y11 Washer for M5, M4 Screw	4 or 0
Y12 Spacer for M6 Screw	4 or 0
Y13 Spacer for M5, M4 Screw	4 or 0

Step 1: Mounting TV interface arm (Part-B) to the back of the TV

a) If your TV has a flat back surface – No curves and steps

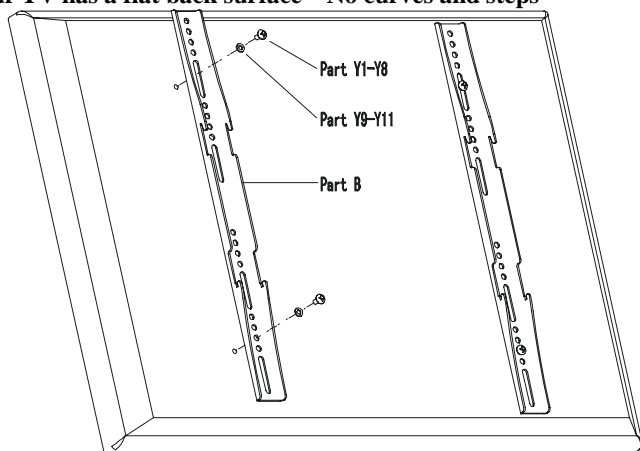


b) if your TV has a uneven or curved back surface, use the supplied spacers (Y12-Y13) to compensate or adjust the height.

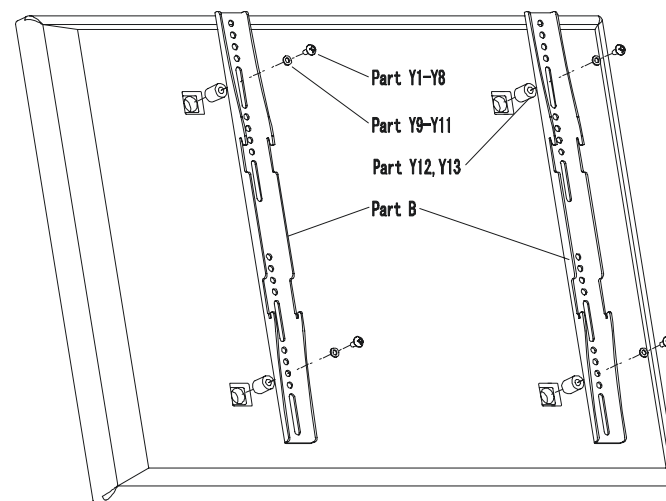

Step 2: Mount the wall plate (Part-A) to the wall

At bottom side of wall plate (Part-A), there are two holes for the security bar. Make sure the wall plate (Part-A) is mounted in correct direction.

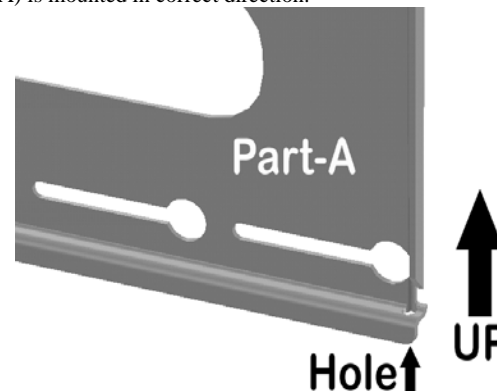

a) Mounting to wood stud

Warning: Pre-drill the hole for the wood screws. Do not overtighten the lag bolts (Part-X1)

Use a wood stud finder to identify the wood studs, most wood studs are 16 inches apart, may be 12, 20 or 24 inches in some place. Make sure the wood lag screws (Part-X1) are screwed into the center of the wood studs.

Use a level to make sure the wall plate is mounted perfectly horizontal.