

# Short Throw Projector Mount *STM-B*

## Installation Manual

---


### Step 1. Adjusting the Mount

If the mount is not in the direction as shown in the right picture below, please turn over the extension arm and locate the three middle screws attaching the mounting bracket to the extension arm (pictured below). Unscrew the two side screws completely and only loosen the middle screw until you can turn the bracket 180°, then screw back the three screws into the bracket.




### Step 2. Mounting to the Projector

Locate the mounting holes on the bottom of your projector. You may have three or four, depending on your projector model.

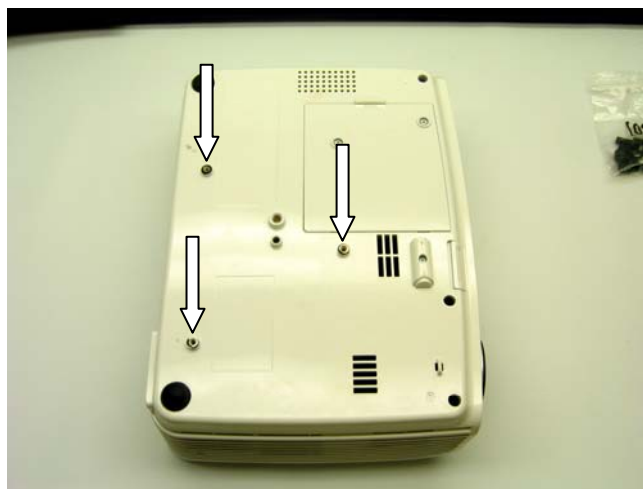


Using **# 00 mounting brackets** place them on to the projector. Make sure that the **# 4 washer** is under the bracket and screw in using the **# 16 screws**.

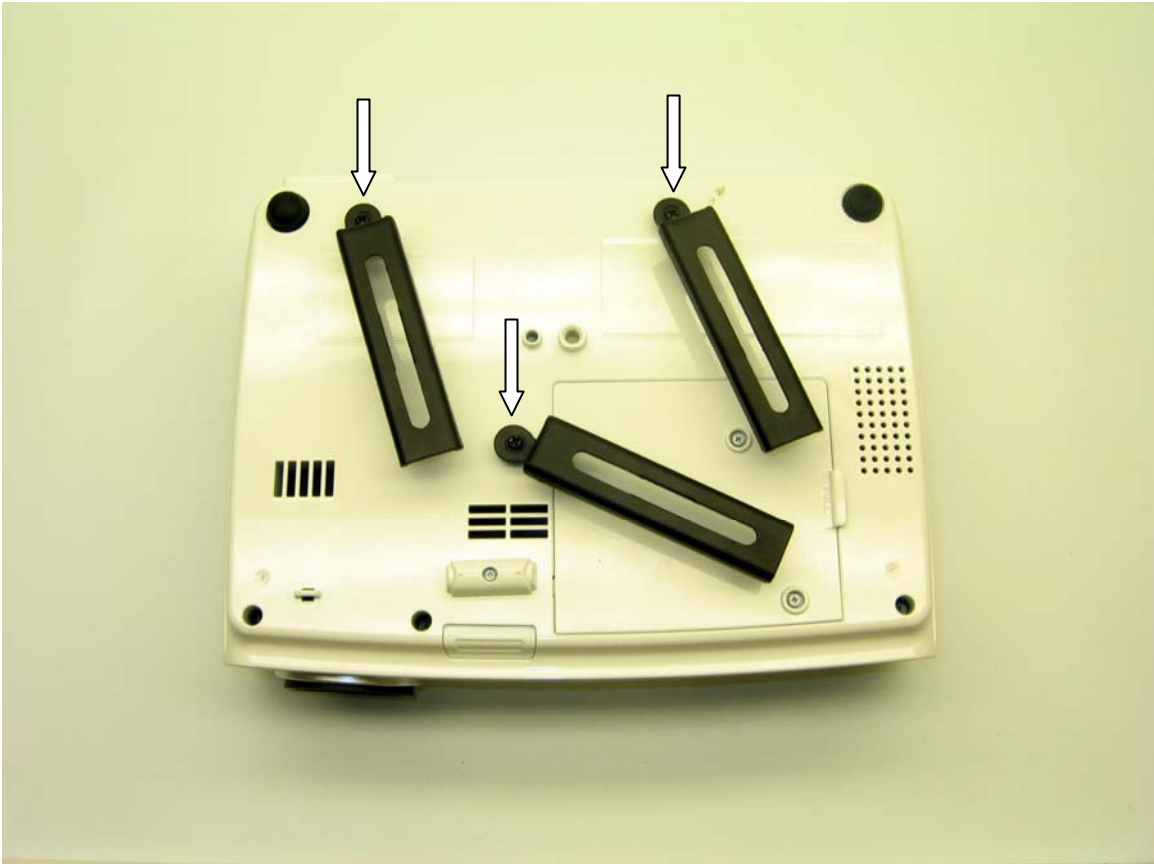

Take the LFM-style projector mount and place it on top of the mounting brackets. You may need to adjust your mounting brackets so they fit on the LFM-style projector mount.




Place the **# 5 square nut** under the mounting brackets and screw in using the **# 2 long hex screws**.

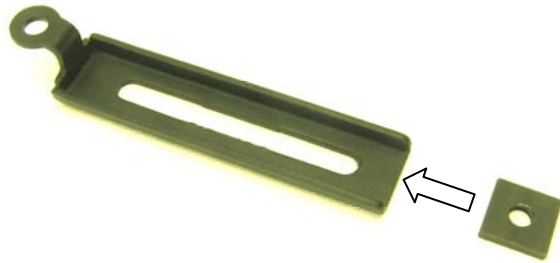


### Step 3. Mounting the Short Throw Projector Mount to the wall

Attach the extension arm with the LFM-style projector mount to the wall plate using the **# 8 screws** and **# 9 lock nuts**.

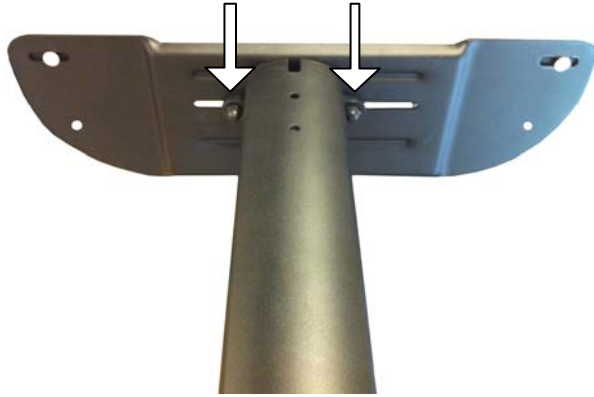

Attach the wall plate to the wall by using the **# 3 washers** and the **# 1 woodscrews**.

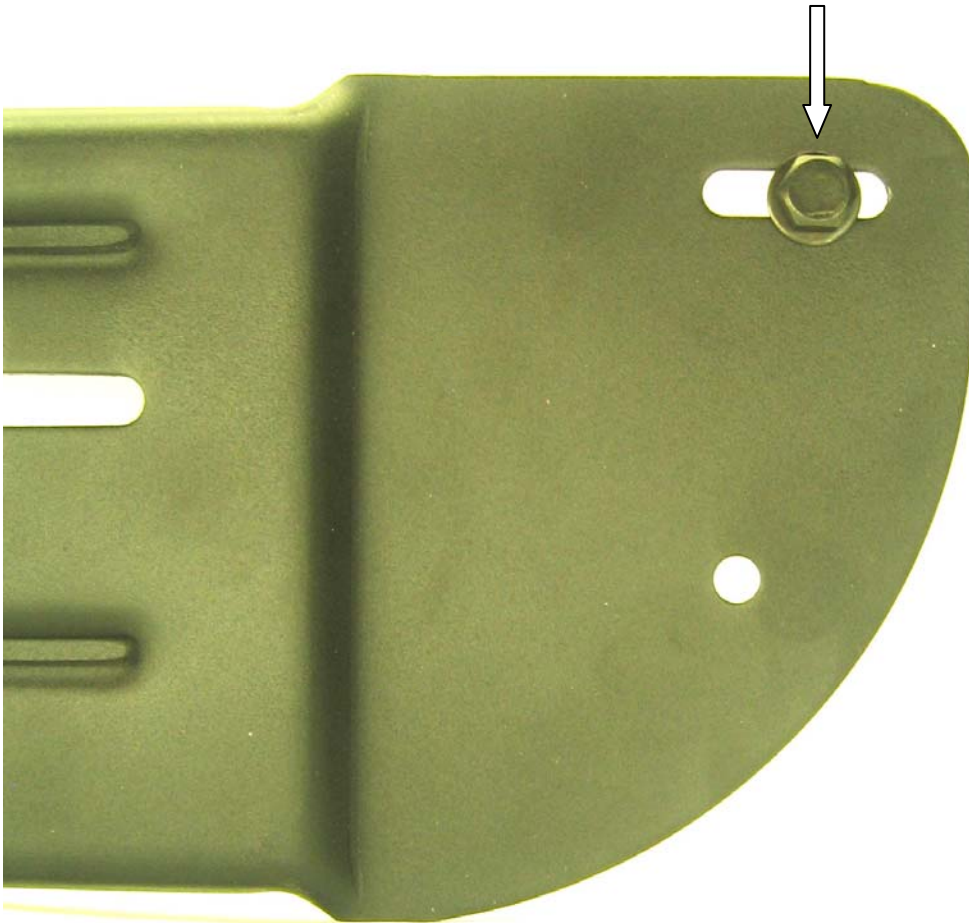

## Finished Installation

3/4 View



Front View



## Included Hardware List

<b>Part #</b>	<b>Item</b>	<b>QTY</b>
<b>00</b>	Mounting Brackets x4, Extension Brackets x4	<b>X8</b>
<b>01</b>	Wood Screw	<b>X4</b>
<b>02</b>	Long Hex Screw (M6 x 12mm)	<b>X8</b>
<b>03</b>	Medium Flat Washer	<b>X6</b>
<b>04</b>	Small Flat Washers	<b>X8</b>
<b>05</b>	Square Nut	<b>X4</b>
<b>06</b>	M4 Allen Wrench	<b>X1</b>
<b>07</b>	M6 Allen Wrench	<b>X1</b>
<b>08</b>	Phillips Screw (M6 x 8mm)	<b>X2</b>
<b>09</b>	Lock Nuts	<b>X2</b>
---	---	---
<b>11</b>	M6 (6mm) Philips Screw	<b>X4</b>
<b>12</b>	M5 (5mm) Philips Screw	<b>X4</b>
<b>13</b>	M4 (4mm) Long Philips Screw	<b>X4</b>
<b>14</b>	M4 (4mm) Short Philips Screw	<b>X4</b>
<b>15</b>	M3 (3mm) Long Philips Screw	<b>X4</b>
<b>16</b>	M3 (3mm) Short Philips Screw	<b>X4</b>
<b>17</b>	M2 .5/2.6 (2.5mm) Philips Screw	<b>X4</b>



00 x8



01 x4



02 x8



03 x8



04 x8



05 x4



06 x1

07 x1



08 x2



09 x2



11 x4



12 x4



13 x4



14 x4



15 x4



16 x4



17 x4